

## Range & Oven Accessories

### GE STYLE BARREL BURNER KNOB

- Black Knob
- Replaces GE Gas Burner Knob

Part#	description
130395	replaces GE WB 3x712
130396	replaces GE WB 3x714



### ELECTRIC RANGE KNOB SET

- Includes: 4 Plastic Knobs, 8 Aluminum Overlays, 4 Sets of Adapters & Instructions
- Universal - Fits All Brands

Part#	description
130400	black knob - set of 4
130401	white knob - set of 4



### ELECTRIC RANGE KNOB

- Includes: 1 Plastic Knob, 2 Aluminum Overlays, 1 Set of Adapters & Instructions
- Universal - Fits All Brands

Part#	description
130405	black knob
130407	white knob



### ELECTRIC OVEN KNOB

- Includes: 1 Plastic Knob, 2 Aluminum Overlays, 1 Set of Adapters & Instructions
- Universal - Fits All Brands

Part#	description
130410	black knob
130411	white knob



### GAS RANGE KNOB SET

- Includes: 4 Plastic Knobs, 4 Aluminum Overlays, 4 Sets of Adapters & Instructions
- Universal - Fits All Brands

Part#	description
130415	black knob - set of 4
130417	white knob - set of 4



### GAS RANGE KNOB

- Includes: 1 Plastic Knob, 1 Aluminum Overlay, 1 Sets of Adapters & Instructions
- Universal - Fits All Brands

Part#	description
130420	black knob
130421	white knob



### GAS OVEN KNOB

- Includes: 1 Plastic Knob, 1 Aluminum Overlay, 1 Sets of Adapters & Instructions
- Universal - Fits All Brands

Part#	description
130425	black knob
130426	white knob

