

Replacement Handles

**BLADE STYLE HANDLE**

- For EZ-FLO
- For Low Lead Faucets & Other “D” Broach Washerless Cartridge Faucets
- Includes 2 Handles, Screws & H&C Index Buttons



Part#	description	finish
21B1100	blade handle (per pair)	CP

**SINGLE WING HANDLE**

- For Gerber
- 16 Broach With Screw
- Metal



Part#	description	finish
21B1112	hot w/acrylic button	CP
21B1114	cold w/acrylic button	CP

**SHORT SOCKET HANDLE**

- For Gerber
- 16 Broach With Screw
- Metal



Part#	description	finish
21B1122	hot w/acrylic button	CP
21B1124	cold w/acrylic button	CP
21B1126	diverter w/acrylic button	CP

**LONG SOCKET HANDLE**

- For Gerber
- 16 Broach With Screw
- Metal



Part#	description	finish
21B1131	hot w/acrylic button	CP
21B1133	cold w/acrylic button	CP
21B1135	diverter w/acrylic button	CP

**SINGLE WING TUB & SHOWER HANDLE**

- For Gerber
- 16 Broach With Screw
- Metal



Part#	description	finish
21B1146	hot	CP
21B1148	cold	CP

Replacement Handles

**ACRYLIC KITCHEN/LAVATORY HANDLE**

- For Gerber
- 16 Broach
- 1 Handle & Screw and 2 Buttons



Part#	description	finish
21B1152	hot & cold	acrylic

**ACRYLIC TUB & SHOWER HANDLE**

- For Gerber
- 16 Broach
- 1 Handle & Screw and 2 Buttons



Part#	description	finish
21B1166	long socket	acrylic

**ACRYLIC TUB & SHOWER HANDLE**

- For Gerber
- 16 Broach
- 1 Handle & Screw and 2 Buttons



Part#	description	finish
21B1174	short socket	acrylic

**4-BLADE KITCHEN/LAVATORY HANDLE**

- For Kohler
- 16 Broach
- 1 Handle & Screw and 2 Buttons
- Metal



Part#	description	finish
21B1185	hot or cold	CP

**4-BLADE TUB & SHOWER HANDLE**

- For Kohler
- 16 Broach
- 1 Handle & Screw and 2 Buttons
- Metal



Part#	description	finish
21B1190	hot or cold	CP